


Instrução para desmontagem | Disassembling Instruction

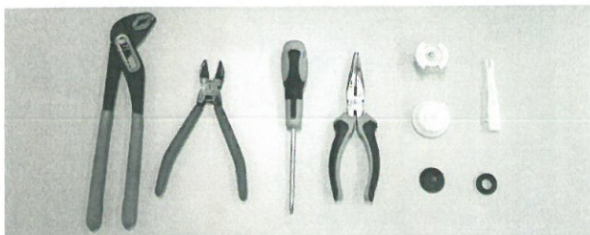


Material necessário | Required material

1




Retirar o botão | Disassemble the button

2

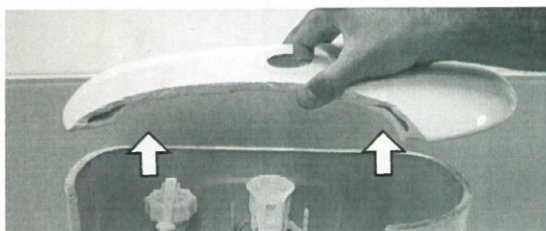


Retirar a tampa | Take out the tank lid

3

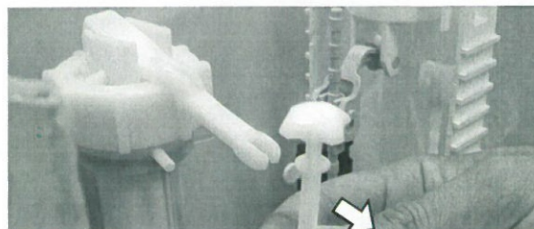

Desprender o extensor da alavanca | Disassemble the screw from the lever

4

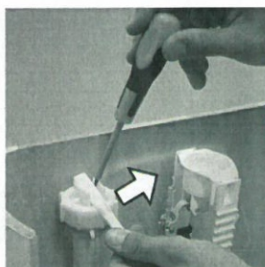


Retirar a alavanca | Take the lever out

5




Retirar a porca | Unscrew the inlet nut

6

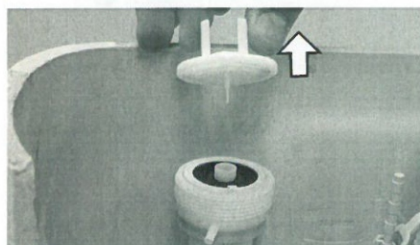


Retirar a tampa | Take the protection out

7

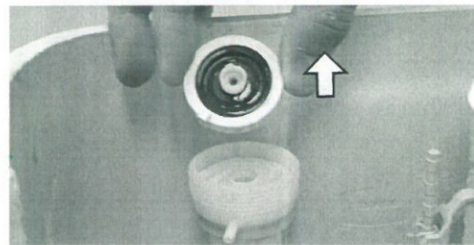

Retirar o apoio e a membrana | Take out the support and seal

8

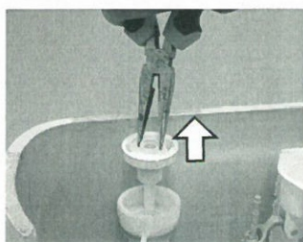


Retirar o apoio amortecedor | Disassemble the 2 pieces on the photo


9



Separar o injector da anilha | separate the injector from the seal

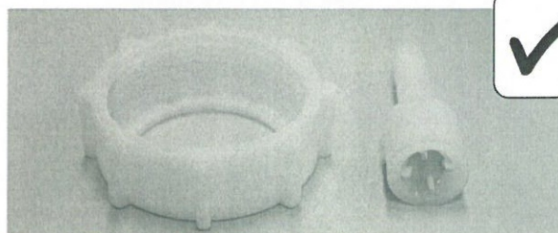


Peças ok | Pieces that will be reused

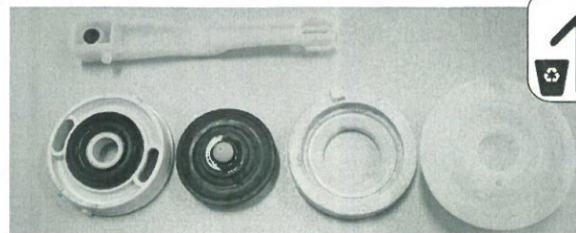

Peças inutilizáveis | Pieces to throw away


Instrução para montagem Kit | Instructions for Assembling New Kit

10

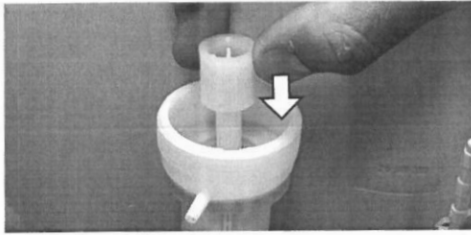


Colocar o injetor | Place the injector

11

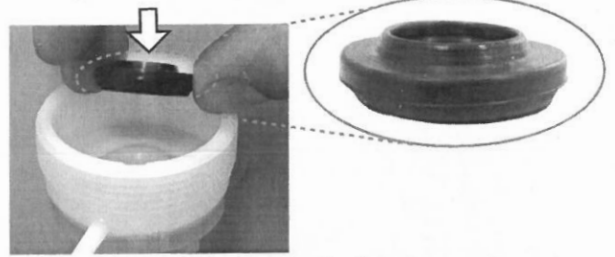


Colocar a anilha | Put the seal on the injector as shown in the picture

12

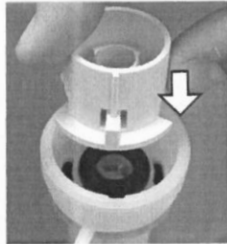


Colocar o apoio do vedante | Assemble the support

13

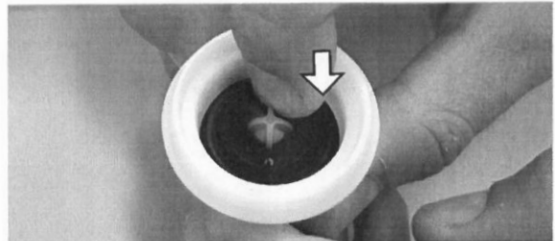


Montar a membrana e o apoio na tampa | Assemble the 2 pieces as shown in the picture

14

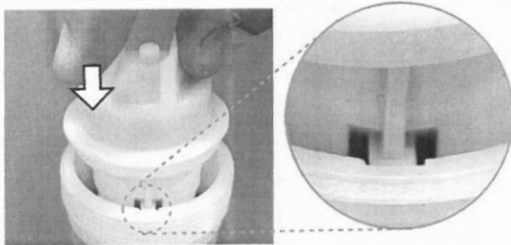


Inserir a montagem anterior na torneira | Place the previous set (13) on the inlet as shown in the picture

15

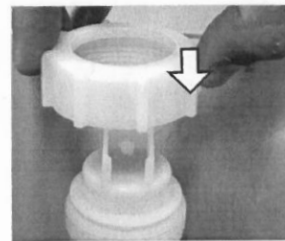


Colocar a porca na torneira | Place the nut on the inlet valve

16

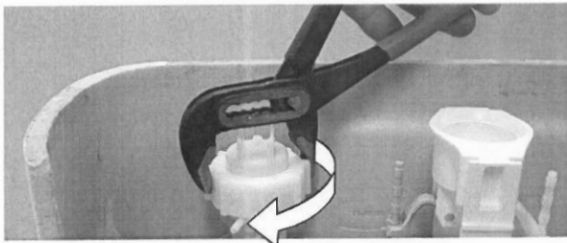

Apertar a porca na torneira | Screw the nut

17

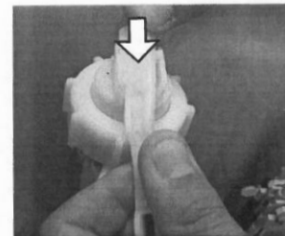


Montar a alavanca | Assemble the lever

18




Cortar a bóia pequena | Cut the small floater

19

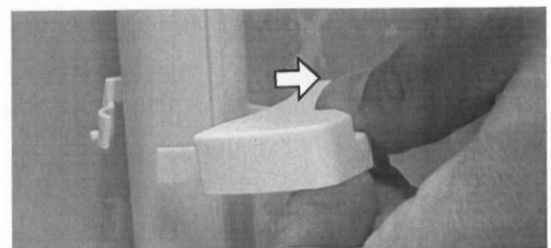


Retirar a bóia pequena | Take off the floater

20

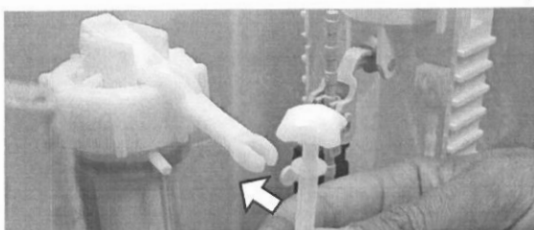

Montar o parafuso na alavanca | Assemble the screw on the lever

21

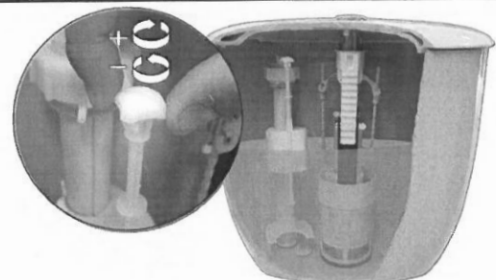

Regular a torneira | Adjust the inlet valve